

## QUICK START



## Cisco IP Phone 8841, 8851, and 8861

- 1 Dial
- 2 Answer
- 3 Hold
- 4 Transfer
- 5 Conference
- 6 Mute
- 7 Voicemail
- 8 Divert
- 9 Forward All
- 10 Call History
- 11 Directories
- 12 Settings
- 13 Navigation
- 14 USB Charging
- 15 Intelligent Proximity
- 16 Tips



### Note

For best results, print on 8.5inch x 14inch (legal-sized) paper.



## 1 Dial

To place a call, pick up the handset and enter a number. Or, try one of these alternatives.

### Redial Last Number

Press **Redial** to redial on your primary line. To redial on another line, press the line button first.

### Dial On-Hook


1. Enter a number when the phone is idle.
2. Lift the handset or press one of these: **Call**, the headset  button, the speakerphone  button, or the Select button.

### Speed Dial

Enter a speed-dial item number and press **SpeedDial**. You may also have speed dials assigned to some buttons along the left side of your phone.

## 2 Answer

New call indicators:

- A flashing amber line button
- An animated icon  and caller ID
- A flashing red light on your handset


To answer the call, lift the handset. Or, press the flashing amber session button, **Answer**, the unlit headset button, or the speakerphone button.

### Answer Multiple Lines


If you are talking on the phone when you get another call, a message appears briefly on the phone screen. Press the flashing amber line button to switch lines and then press the session button to answer the second call and put the first call on hold automatically.

You can answer a call through an actionable incoming call alert if this feature is enabled by your administrator.

## 3 Hold


1. Press **Hold** . The hold icon appears and the line button flashes green.
2. To resume a call from hold, press the flashing green line button, **Resume**, or **Hold**.

## 4 Transfer


1. From an active call, press **Transfer** .
2. Enter the transfer recipient's phone number.
3. Press **Transfer** again (before or after the party answers). The transfer completes.

### Direct Transfer

You can transfer the active call to the held call either on the same line or across lines

- From an active call, press **Transfer** .
- Press **Active calls** to select the held call, and press **Transfer** again to finish the call transfer.


## 5 Conference

1. From an active call, press **Conference** .
2. Make a new call.
3. Press **Conference** again (before or after the party answers). The conference begins and the phone displays “Conference.”
4. Repeat these steps to add more participants.

The conference ends when all participants hang up.

### Join Calls


You can conference the active call with the held calls either on the same line or across lines.

- From an active call, press **Conference** .
- Press **Active calls** to select the held call, and press **Conference** again to create the conference.

### View and Remove Participants

During a conference, press **Show Details**. To remove a participant from the conference, scroll to the participant and press **Remove**.

## 6 Mute


1. While on a call, press **Mute** . The button glows to indicate that mute is on.
2. Press **Mute** again to turn mute off.

## 7 Voicemail

New message indicators:

- A solid red light on your handset
- A stutter dial tone (if available)
- The voicemail icon and number display on the screen along with one idle session button


### Listen to Messages

Press **Messages**  and follow the voice prompts. To check messages for a specific line, press the line button first.

## 8 Divert

Press **Divert** when the call is ringing, active, or on hold. **Divert** redirects an individual call to voicemail or to another number set up by your system administrator.

## 9 Forward All


1. To forward calls received on your primary line to another number, press **Forward all**.
2. Enter a phone number or press **Messages**  to forward all calls to voicemail. Look for confirmation on your phone screen.
3. To cancel call forwarding, press **Forward off**.

To set up forwarding on a secondary line, press the line button to select the second line and press **Forward all**.

To set up forwarding remotely, access your Self Care Portal.

## 10 Call History

### View Call History

1. Press **Applications** .

2. Scroll and select **Call History**.
3. Select a line to view. Your phone displays the last 150 missed, placed, and received calls.
4. To view details for a call, scroll to the call, press **More**, and then press **Details**.


### View Missed Calls Only

1. View your call history.
2. Press **Missed**. Alternately, press the session button mapped to the Call History icon.

### Dial Call History

1. View your call history, or navigate to your missed or placed calls.
2. Scroll to a listing and lift the handset, or press **Select**.
3. To edit a number before dialing, press **More > EditDial**.

## 11 Directories

1. Press **Contacts** .
2. Scroll and select a directory.
3. Use your keypad to input search criteria.
4. Press **Submit**.
5. To dial, scroll to a listing and press **Dial**.

## 12 Settings

### Volume

The Volume bar is located to the left of the keypad.




- To adjust the handset, headset, or speakerphone volume, press **Volume** when the phone is in use.
- To adjust the ringer volume, press **Volume** on the left (-) or right (+).
- To silence the phone when ringing, press **Volume** left one time. Pressing **Volume** multiple times lowers the ringer volume.

### Ringtone

1. Press **Applications** .

2. Select **Settings > Ringtone**.
3. Select a line.
4. Scroll through the list of ringtones and press **Play** to hear a sample.
5. Press **Set** and **Apply** to save a selection.

### Screen Contrast

1. Press **Applications** .
2. Select **Settings > Brightness**.
3. Press the Navigation cluster left or right to change the contrast and press **Save**.

### Font Size

1. Press **Applications** .
2. Select **Settings > Font Size**.
3. Select **Tiny, Small, Regular, Large, or Huge**.
4. Press **Save**.

## 13 Navigation

### Where are the Line Buttons?

Line buttons are located on the left side of the phone screen. Buttons that are not assigned to phone lines can be used for speed-dials and other features. Contact your system administrator for more information.



**Note** If you are using a locale that reads right to left, such as Arabic, the line button and session button locations are swapped.

### Where are the Session Buttons?

Session buttons are located on the right side of the phone screen.

### Where are the Softkeys?

Four softkey buttons are located below the phone screen. You can press **More** (when available) to reveal additional softkeys.



### How Do I Navigate in a List or Menu?

Press **up, down, left, or right** on the four-way Navigation cluster.




A scroll bar on the screen indicates your relative position within a list.

### How Do I Select an Item in a List or Menu?

With the item highlighted, press **Select**. Or, use the keypad to enter the corresponding item number.

### How Do I Exit a Menu?

To exit a menu completely, press **Exit**.

To go back one level in a menu, press **Back** .



**Note** If you press and hold **Back**, you exit a menu completely.

## 14 USB Charging

To charge your mobile phone, use the side USB port of the Cisco IP Phone 8851, or use the side or back USB port of the Cisco IP Phone 8861.

To charge your tablet, use the back USB port of Cisco IP Phone 8861.

## 15 Intelligent Proximity

If your administrator has enabled this feature, you can press the second line button to open the Bluetooth menu to pair and connect your smartphone. After your smartphone connects, its name displays on the second line label and you can use this line to manage your smartphone calls. You can also enable or disable this feature using the Hands-free 2-way audio entry in the Bluetooth menu. For more information, contact your system administrator.

1. Press **Applications** .
2. Select **Bluetooth**.

3. Enable or disable **Hands-free 2-way audio**.

## 16 Tips

### How Can I Keep Track of Multiple Calls?

Line button colors indicate call states and can help you stay oriented when handling multiple calls including shared line:

- Ringing call—Flashing amber
- Connected call—Solid green
- Held call—Flashing green
- Shared line in-use remotely—Solid red
- Shared line on hold remotely—Flashing red

### What Is the Best Way to Use My Headset?

If you use a headset to dial or answer a call, your headset serves as the primary audio path and a headset icon is displayed in the right corner of the header bar. Once you use a headset, press **Answer** to automatically answer the call using the headset.

### How Do I Set Up Speed Dials?

To set up Speed Dials and customize other features and settings for your phone, use a web browser on your computer to access the Self Care Portal.

### Where Can I Find a Complete User Guide?

<http://www.cisco.com/c/en/us/support/collaboration-endpoints/unified-ip-phone-8800-series/products-user-guide-list.html>

Americas Headquarters  
Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883



Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)